



# 40-120R

## COMPRESSOR MOUNT

SMALL BLOCK CHEVY  
LONG WATER PUMP  
PASSENGER SIDE

**OLD AIR PRODUCTS** www.oldairproducts.com  
DIVISION OF COLD AIR PRODUCTS INC.

1201 Forum Way South - Fort Worth, TX 76140  
(817) 531-2665 - FAX (817) 531-3257

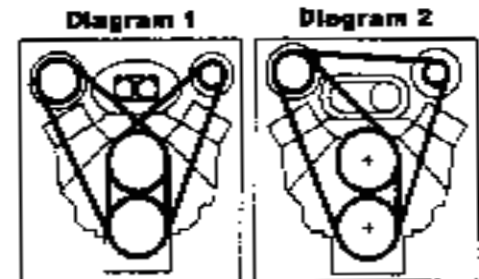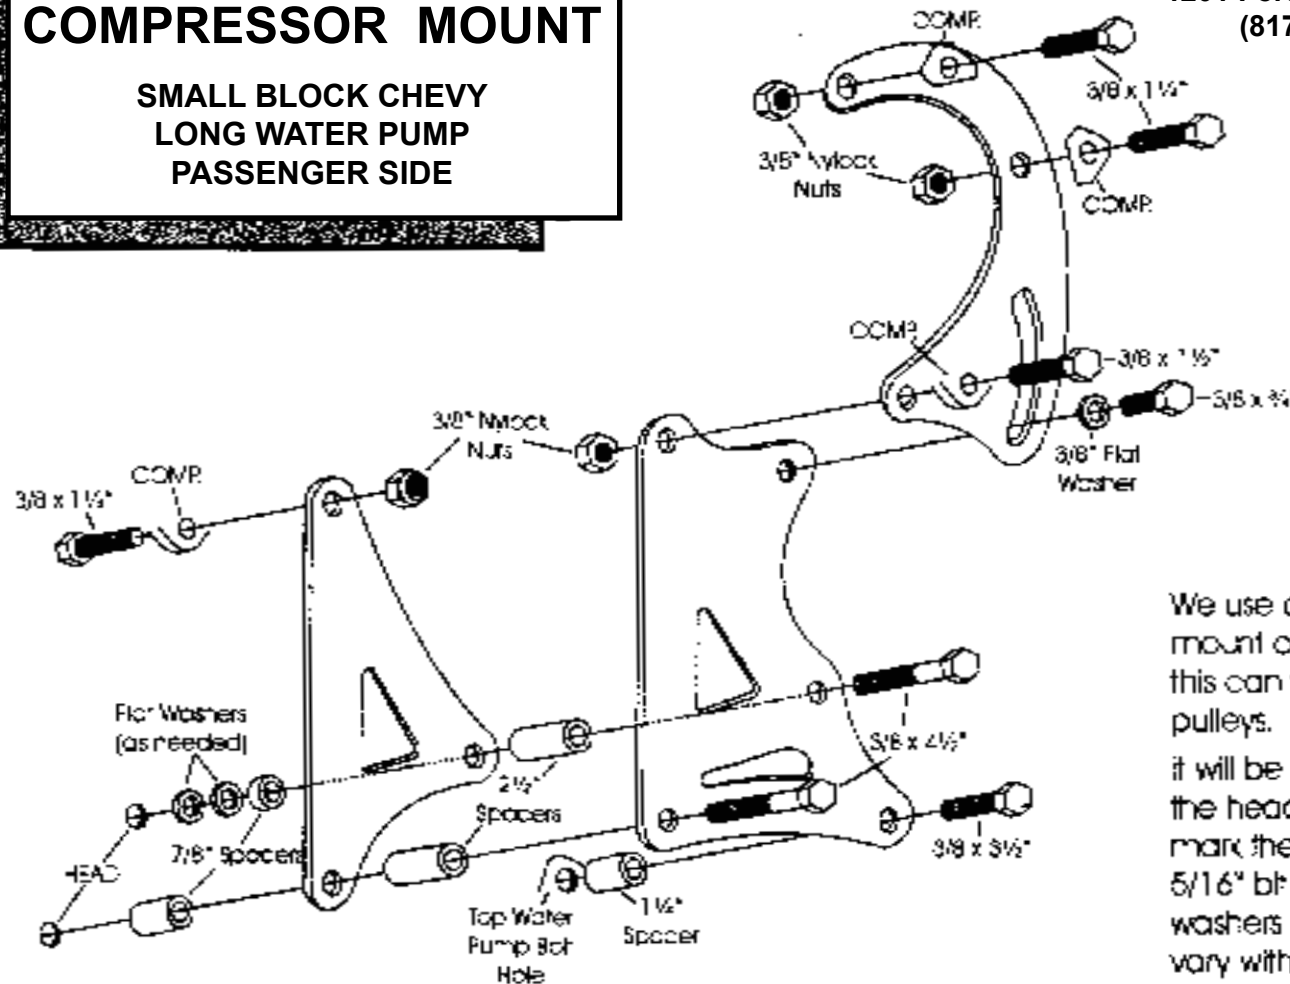

We use a belt length of 59 1/2"-60 1/2" with the mount on installations in our shop. However, this can vary with the diameter of your pulleys.

it will be necessary to drill and tap one hole in the head. Using the brackets as a template, mark the location on the head. Drill with a 5/16" bit and tap 3/8-16". The number of washers between the head and 1/4" spacer will vary with different castings.

When using both A.C. and Alternator Brackets, belts can be run either of two ways, - as shown. They will require the use of 2 groove crank and water pump pulleys. Routing the belts as shown in Diagram 2 - will allow clearance for small blowers and extra room for T.P.I. air cleaners. The long belt will be approximately 71-72"

**As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.**