
## POWER STEERING PUMP MOUNT

40-400L

Small Block Chevy - Driver Side Short Waterpump

NOTE: If your pump has a stud at the lower rear pivot point, it may be used instead of the 1" bolt and .150 spacer.

We use a belt length of 36 to 36½" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

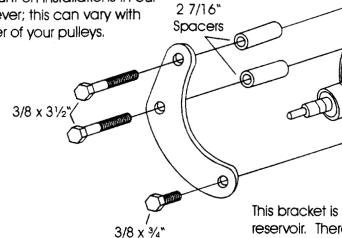

www.oldairproducts.com 1201 Forum Wav South - Fort Worth, TX 76140 (817) 531-2665 - FAX (817) 531-3257 **ENGINE** 3/8 x 1" 3/8" Flat Washer 3/8 x 1" 3/8" Flat .150 Washer NOTE: Some early blocks may have Spacer casting flash that will interfere with the rear of bracket. This is easily removed with a small grinding stone or hand file.

This bracket is designed to be used with the non-metric Chevrolet pump with attached reservoir. There are a large number of pumps available from 1961 to 1981 that will work well with our power steering bracket. For more detailed information see the enclosed power steering pump sheet. Most short water pump applications use a crankshaft p.s. pulley that bolts over the existing pulley. This will align with the p.s. pump pulley. This pulley is available from G.M. as part number- 3751232 or from us.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.