## 40-118R


www.oldairproducts.com

COMPRESSOR MOUNT

**PASSENGER SIDE - WIDE MOUNT** SHORT WATER PUMP **BIG BLOCK CHEVY** 

3/8 x 21

15/16 Spacer

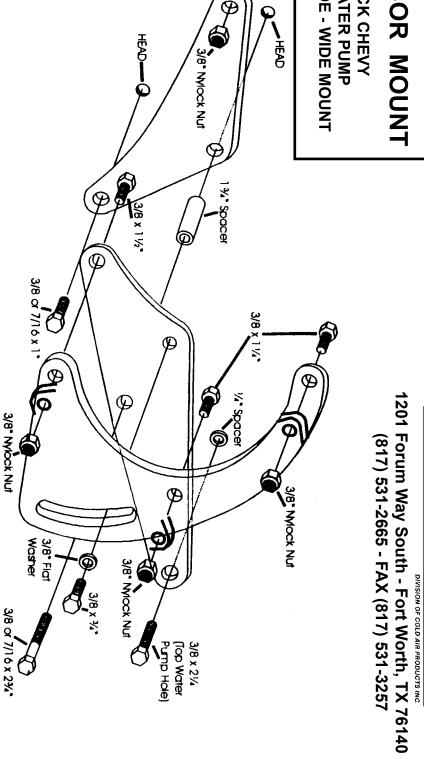

diameter of your pulleys.) installations in our shop. However; this can vary with the (We use a bett length of 61-62" with this mount on

fits your application before painting or plating. As with any part of this nature, make sure it

> the corresponding holes in the mount to 7/16". If your head has 7/16" if will be necessary to enlarge

have 7/16". This kit includes both sizes of bolts for NOTE: Some heads have 3/8" bolt holes and some

these holes

When installing the mount, start all bolts and mount the compressor before tightening.