


A.C. COMPRESSOR MOUNT 40-132R

Small Block Chevy - Short Waterpump
Passenger Side

OLD AIR PRODUCTS www.oldairstproducts.com
DIVISION OF COLD AIR PRODUCTS INC.

1201 Forum Way South - Fort Worth, TX 76140
(817) 531-2665 - FAX (817) 531-3257

We use a belt length of 58-1/2" to 59-1/2" with this mount on installations in our shop. However this can vary with the diameter of your pulleys.

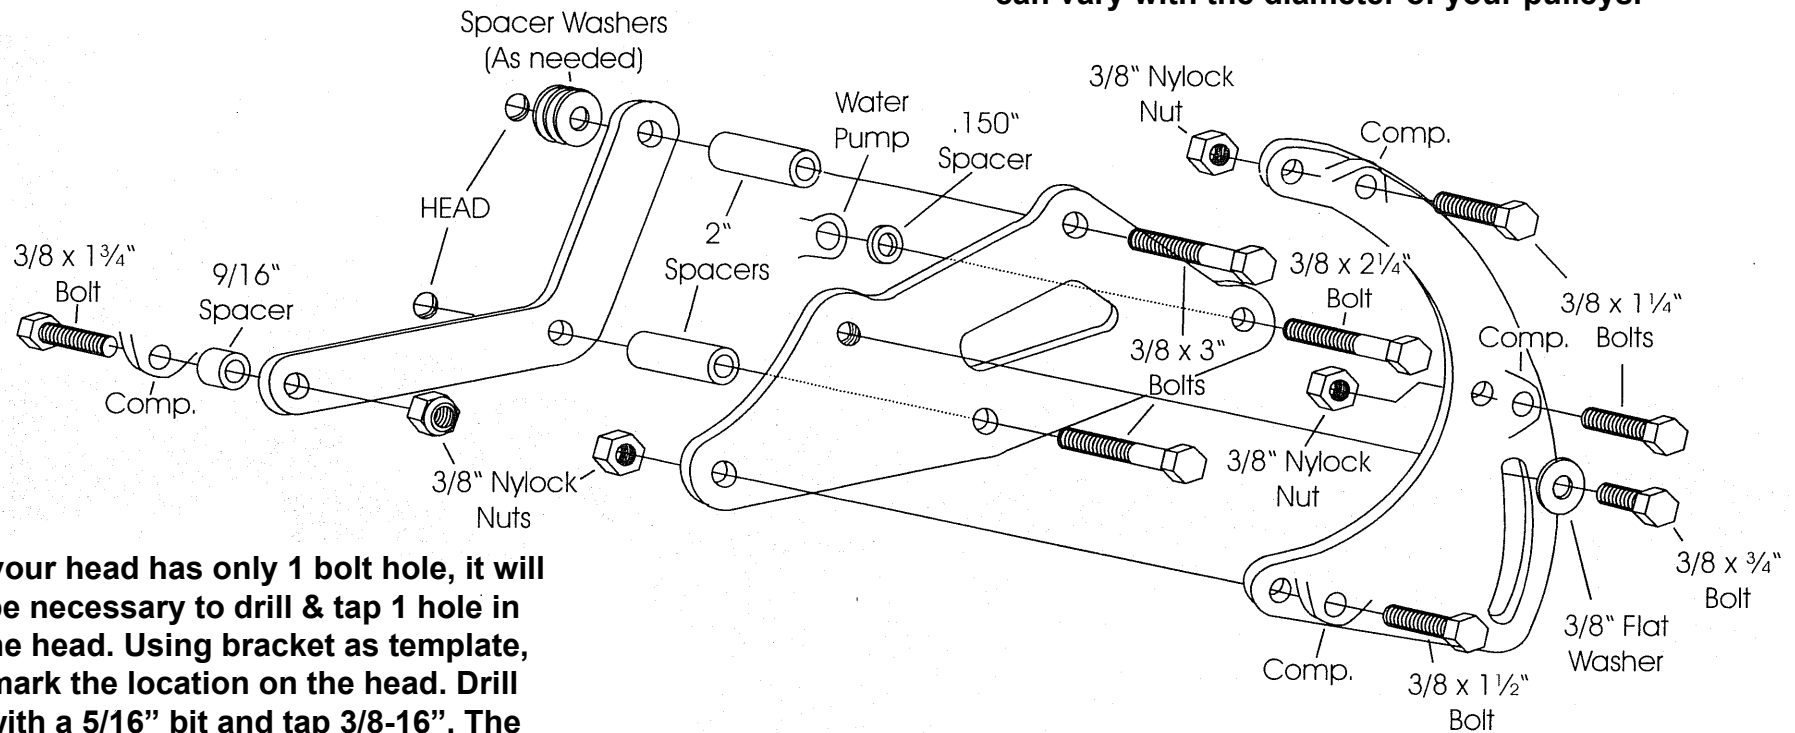

If your head has only 1 bolt hole, it will be necessary to drill & tap 1 hole in the head. Using bracket as template, mark the location on the head. Drill with a 5/16" bit and tap 3/8-16". The number of washers between the head and 1/4" spacer will vary with different castings. As with any mount system, assemble all of the brackets to engine **BEFORE TIGHTENING THE BOLTS**

As with any part of this nature, make sure it fits your application before painting or plating, Parts that have been painted, plated or modified may not be returned.