

GM ALTERNATOR MOUNTING BRACKET

40-200R

(Passenger Side)


Chevrolet Small Block V-8 with Short Water Pump

WARNING: Cancer
and Reproductive Harm -
www.P65Warnings.ca.gov

Install bolts into water pump first, then determine the number of spacer washers needed between the bracket and intake manifold. This will vary according to the thickness of different brands of intake manifolds.

START ALL MOUNTING BOLTS BEFORE TIGHTENING.

We use a belt length of 51 to 52 inches with this mount on installations in our shop. However length of the belt may vary with the diameter of your crankshaft and water pump pulleys.

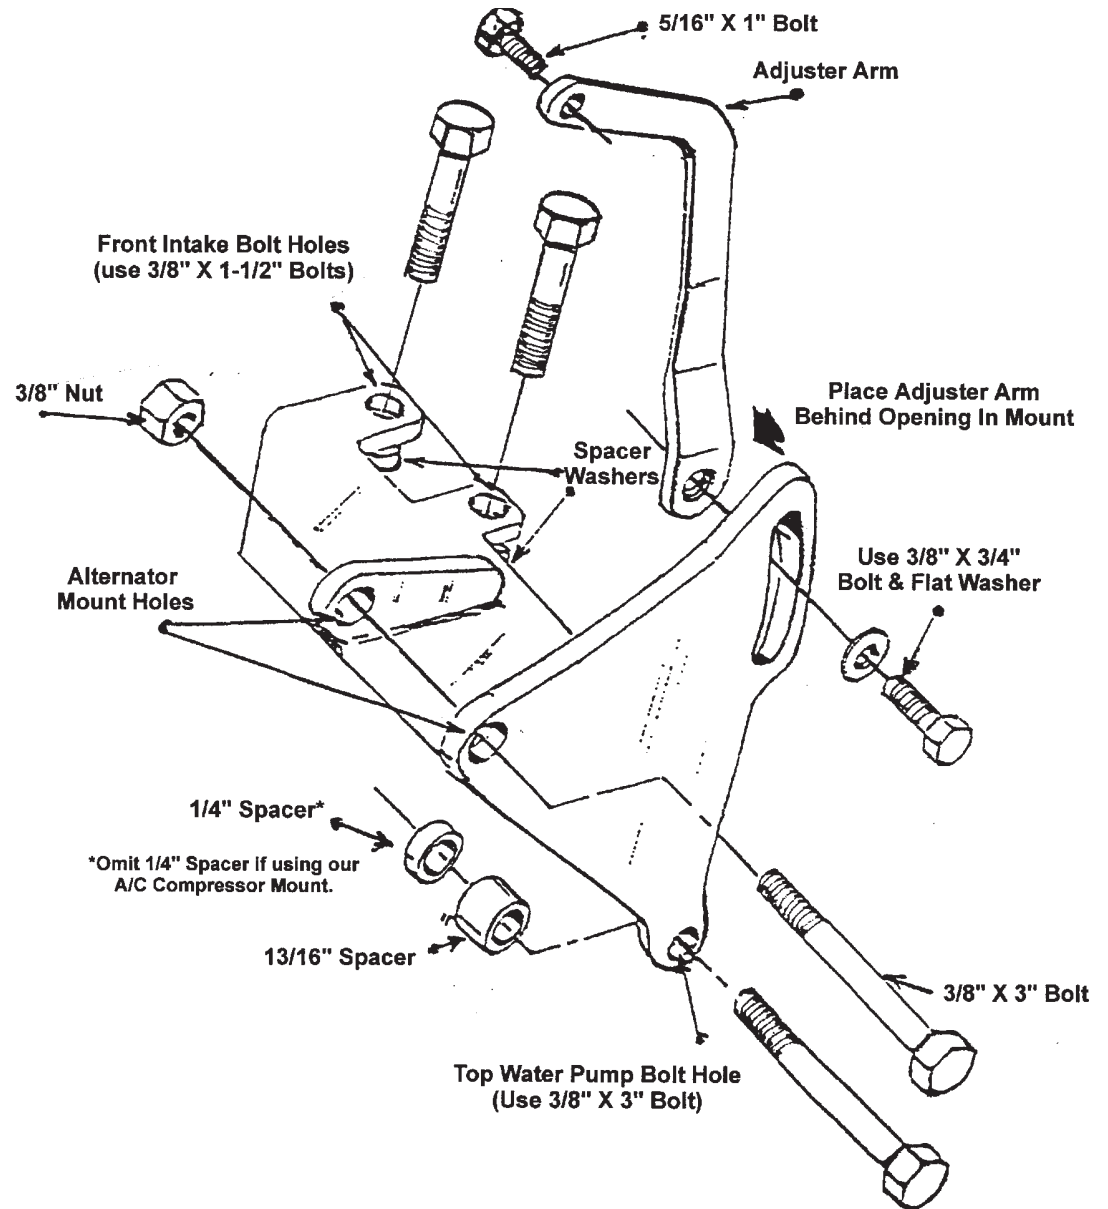

OLD AIR PRODUCTS www.oldairproducts.com
DIVISION OF COLD AIR PRODUCTS INC.

1201 Forum Way South - Fort Worth, TX 76140
(817) 531-2665 - FAX (817) 531-3257

MAKE SURE THIS BRACKET FITS YOUR APPLICATION BEFORE
PLATING OR PAINTING. ALTERED BRACKETS CANNOT BE
RETURNED FOR REFUND.