




1201 Forum Way South - Fort Worth, TX 76140
 (817) 531-2665 - FAX (817) 531-3257

40-113L

COMPRESSOR MOUNT

SMALL BLOCK CHEVY
 SHORT WATER PUMP
 WIDE MOUNT - DRIVER SIDE

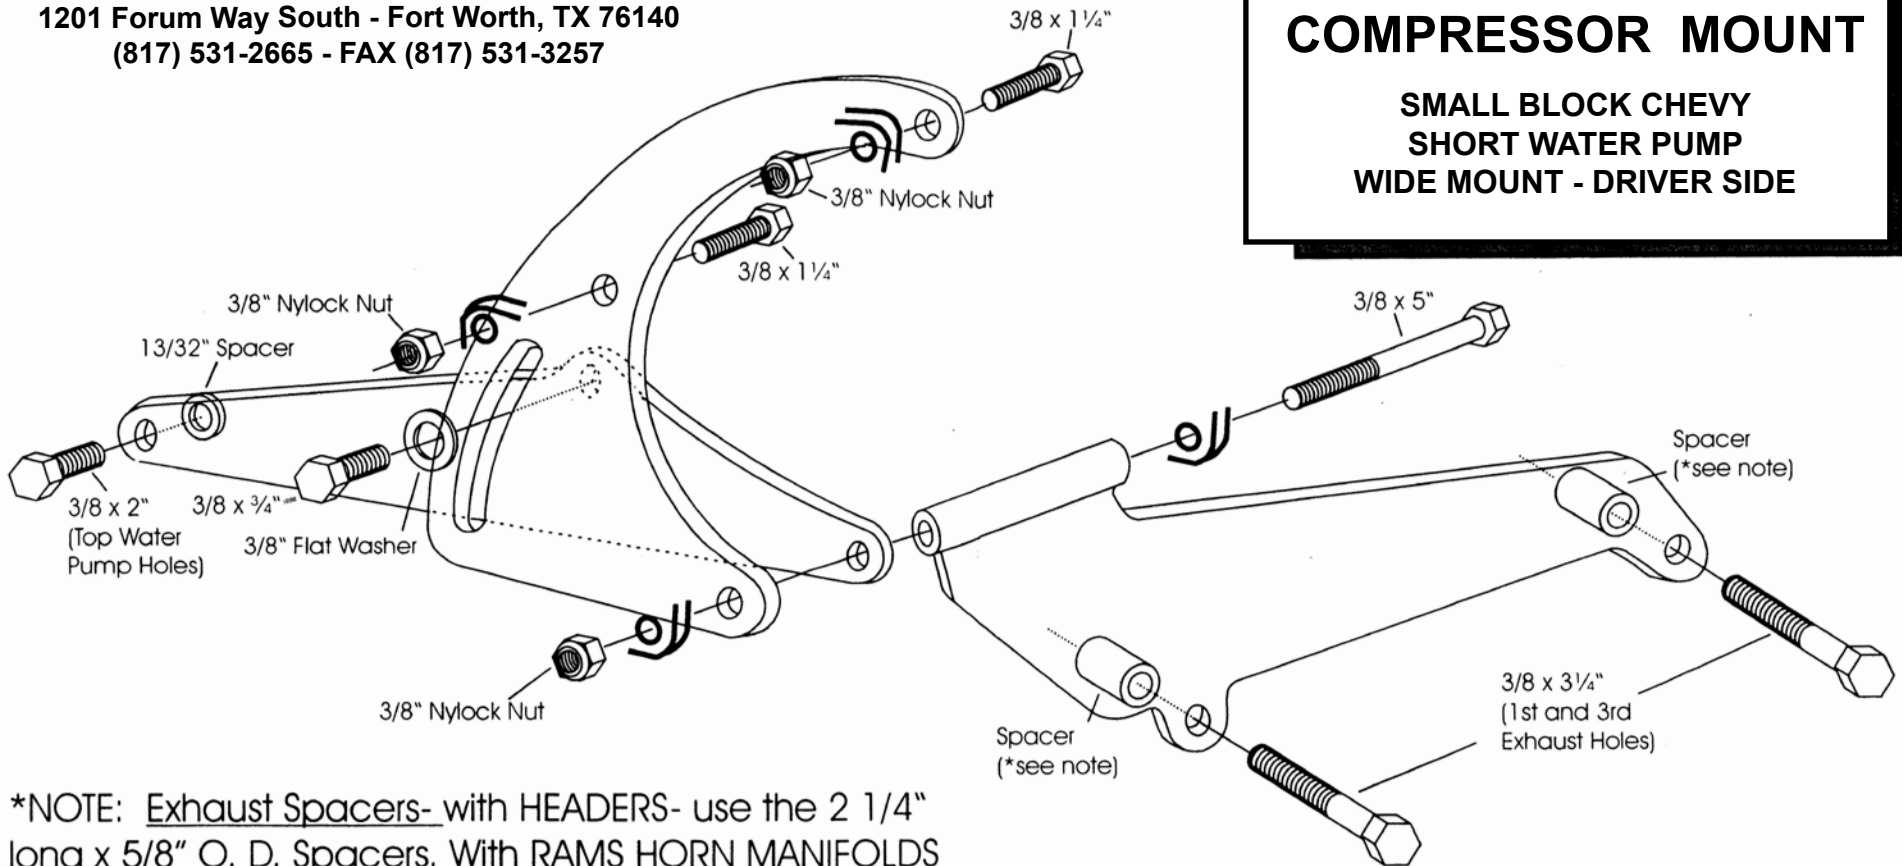

*NOTE: Exhaust Spacers- with HEADERS- use the 2 1/4" long x 5/8" O. D. Spacers. With RAMS HORN MANIFOLDS use the 1/4" long x 3/4" O. D. Spacer at rear hole of bracket and a 1 1/16" long x 3/4" O. D. Spacer at front hole of bracket. With the later DROP-TYPE manifolds use the 1 1/16" long x 3/4" O. D. spacers at both bracket holes. As with any mount system, assemble all of the brackets to engine BEFORE TIGHTENING THE BOLTS.

We use a belt length of 60-61" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

As with any part of this nature, make sure it fits your application before painting or plating.