

A/C COMPRESSOR MOUNTING BRACKET

40-100R (Passenger Side)


40-100L (Driver Side)

**Chevrolet Small Block V-8
with Short Water Pump**

Install bolts into water pump first,
then determine the number of spacer
washers needed between the bracket
and intake manifold. This will vary
according to the thickness of different
brands of intake manifolds.

**START ALL MOUNTING BOLTS BE-
FORE TIGHTENING.**

We use a belt length of 54 to 55 inches
with this mount on installations in
our shop. However length of the belt
may vary with the diameter of your
crankshaft and water pump pulleys.

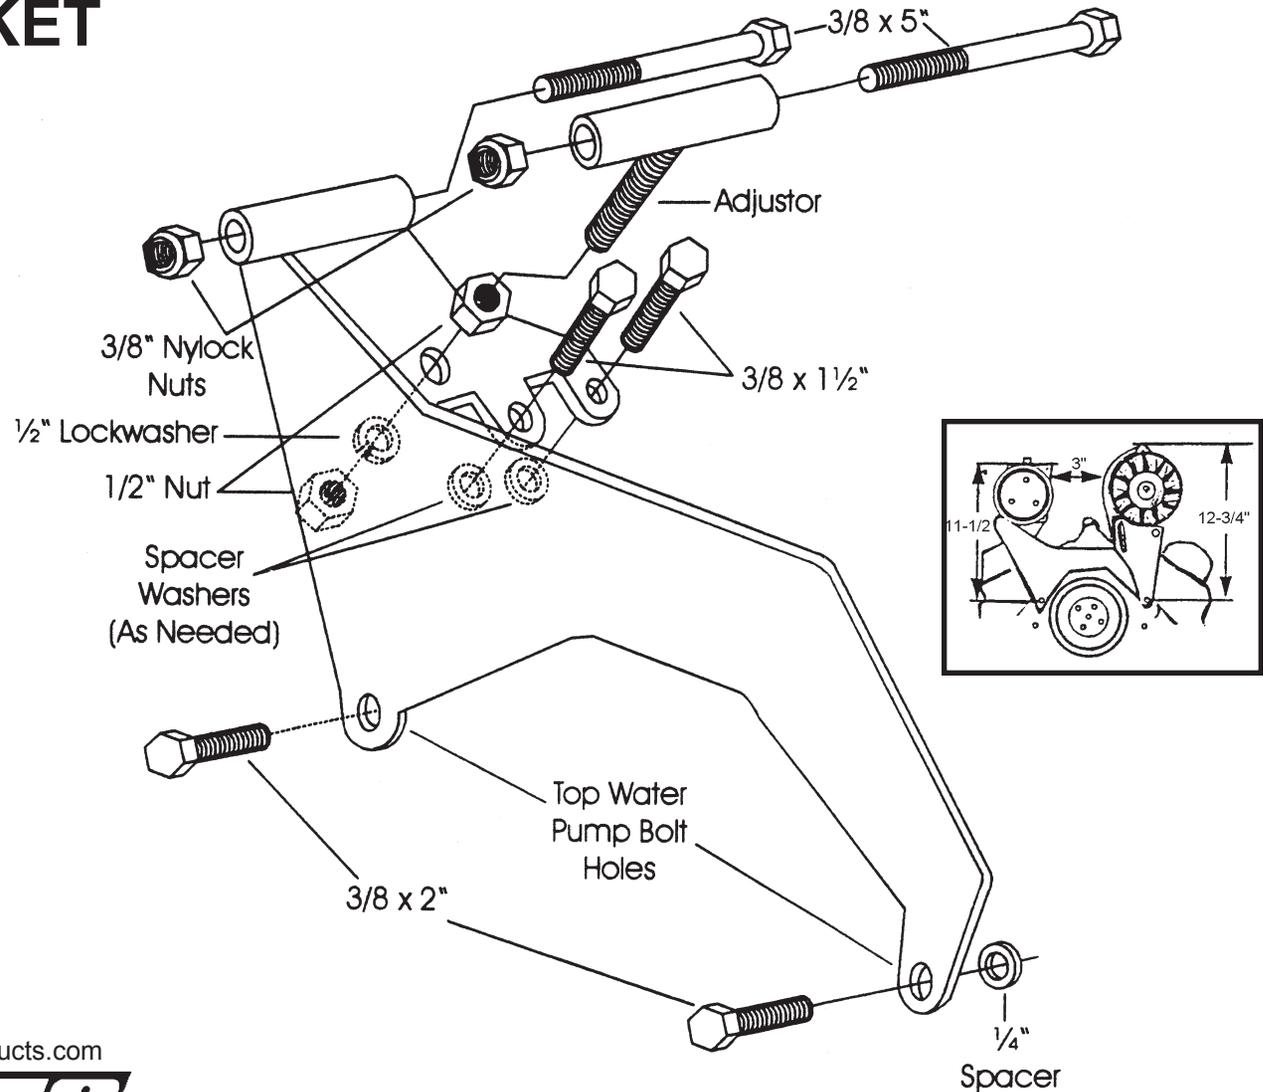

OLD AIR PRODUCTS www.oldairstproducts.com
DIVISION OF COLD AIR PRODUCTS INC.

1201 Forum Way South - Fort Worth, TX 76140
(817) 531-2665 - FAX (817) 531-3257

**MAKE SURE THIS BRACKET FITS YOUR APPLICATION
BEFORE PLATING OR PAINTING. ALTERED BRACKETS
CANNOT BE RETURNED FOR REFUND.**