


40-113R

COMPRESSOR MOUNT

SMALL BLOCK CHEVY
SHORT WATER PUMP
WIDE MOUNT - PASSENGER SIDE

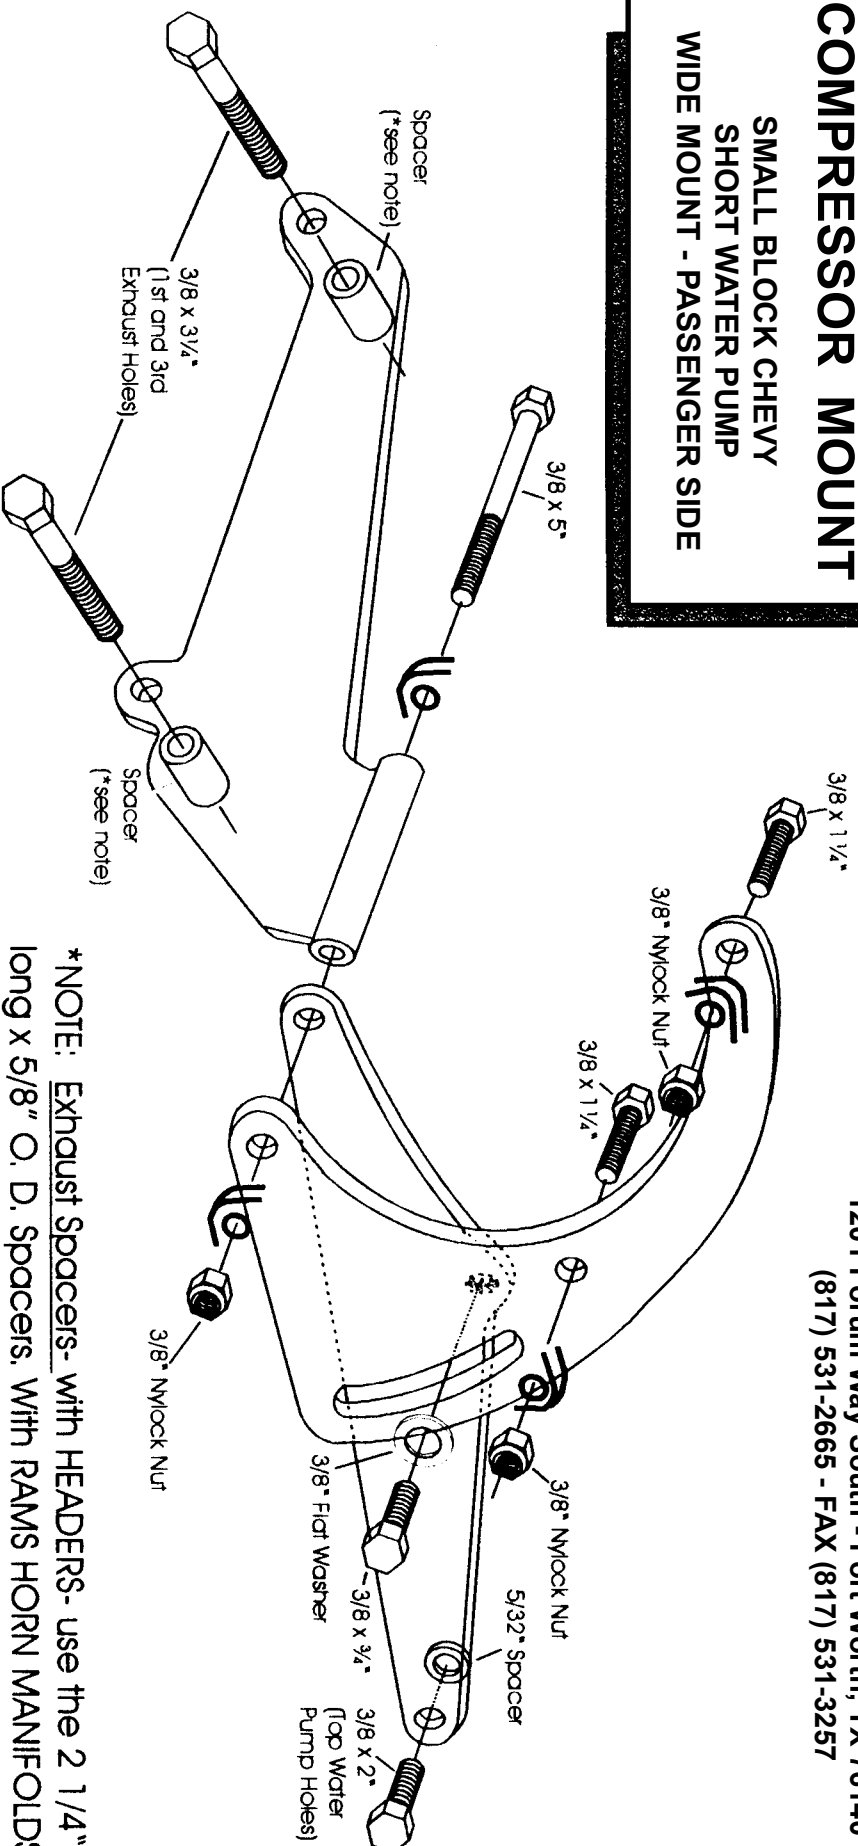

We use a belt length of 60-61" with this mount on installations in our shop. However, this can vary with the diameter of your pulleys.

***NOTE: Exhaust Spacers-** with HEADERS- use the 2 1/4" long x 5/8" O. D. Spacers. With RAMS HORN MANIFOLDS use the 1/4" long x 3/4" O. D. Spacer at rear hole of bracket and a 1 1/16" long x 3/4" O. D. Spacer at front hole of bracket. With the later DROP-TYPE manifolds use the 1 1/16" long x 3/4" O. D. spacers at both bracket holes. As with any mount system, assemble all of the brackets to engine BEFORE TIGHTENING THE BOLTS.

As with any part of this nature, make sure it fits your application before painting or plating.

OLD AIR PRODUCTS www.oldairproducts.com

DIVISION OF GOLD AIR PRODUCTS INC.

1201 Forum Way South - Fort Worth, TX 76140
(817) 531-2665 - FAX (817) 531-3257